

CLAYMORE enough 3

CLAYMORE Enough 3


User Manual

This product is a wired lighting fixture that is used by connecting the power cord to the power supply with an adapter. Please follow the user manual before use. If any abnormality is found in the product, discontinue use and contact the dealer or a service center where the product was purchased.

Caution

- Do not use near high temperatures such as fires or heating equipments. It may cause product malfunction.
- Be careful not to leave this product in the rain for a long time or submerge it in water. It may cause electric shock or product malfunction.
- Do not store or use in vehicles exposed to direct sunlight. It may cause product malfunction.
- Do not use if it exceeds the operating temperature range (-10 °C to 40 °C).
- Please do not place in the reach of infants. It may cause swallowing of parts or injury.
- Adult supervision is necessary when used by children. Misuse of light may cause injury or electric shock.
- Do not insert any metal parts into the terminal block of the connector. It may cause heat, explosion or electric shock.
- Do not disassemble or modify the product.
- Do not touch the connector with wet hands. There is a danger of electric shock.
- After use, be sure to turn off the power.
- Do not forcefully fold. It may damage the product.
- If the product is dropped or experiences physical shock, damage may be accumulated inside the product and unexpected malfunction may occur even during normal use. Be careful not to apply physical shocks to the main unit.
- Please keep in a dry place without moisture.

1. Components

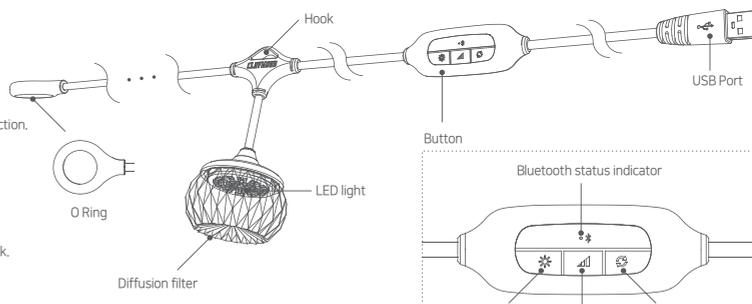

2. Contents

 


3. Instructions

Supplying power **Caution** ※ Please do not connect lower output than 5V2A.

Connect to USB wall charger(5V2A) or Power bank(CLAYMORE product with power bank) to supply power.


● Connecting to Charger adapter (5V2A)



● Connecting to Portable charger (5V2A 1)



 ● Connecting to CLAYMORE product with power bank function



※ Charger adapter, portable charger, CLAYMORE product with power bank sold separately.

 
ON/OFF

Press and hold the **ON** button on the product for 2 seconds to turn on the light. When the power is ON, press and hold for 2 seconds again to turn off.



LED Color Change

When light is ON, press **ON** button shortly to adjust the light color in 6 mode.




[6 Light Mode]



5 STEP Dimming

When light is ON, press **ON** button shortly to adjust the brightness in 5 steps.

 
※ Light blinks once when Maximum and Minimum brightness is reached.



SOS-Flash

When light is ON, press and hold **ON** button 5seconds to begin SOS signal.

 
When SOS mode, press **ON** button to return to the previous light mode.



4. Installation


● Using Carabiner

Carabiners can be attached to the hook on the top of the product. (Carabiner included)

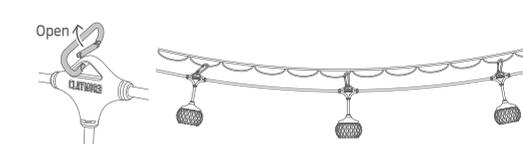

with CLAYMORE App


You can control the lighting by using Claymore app.

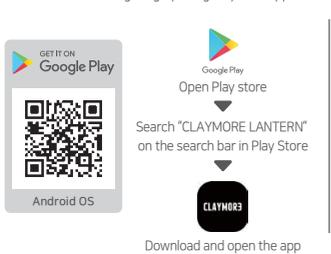

To install Claymore app, please scan the QR code or search "CLAYMORE LANTERN" on the search bar in Play Store or App Store.

● Register new device

When the product turns on, bluetooth pairing starts automatically. During pairing, the Bluetooth indicator on the product will blink. After the pairing the indicator will flash without blinking.

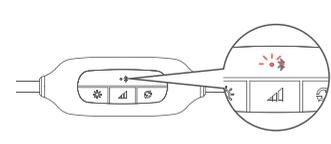


Caution

Be sure to install Claymore app first, then search and register the device in the app.


※ If the product is directly connected using Bluetooth pairing in the smartphone settings rather than through the app, turn off the product and turn it on again, then install the app and re-register the product in the app.

After pairing with the product, operate the app in the order of ① to ⑥.

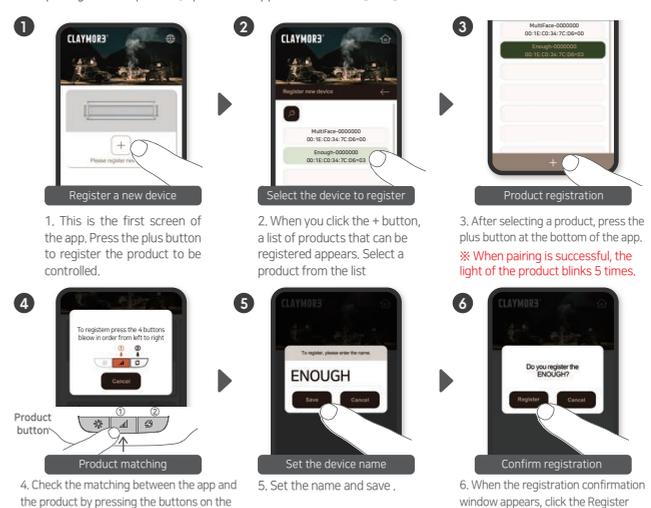

● Main screen

1. Main screen composition

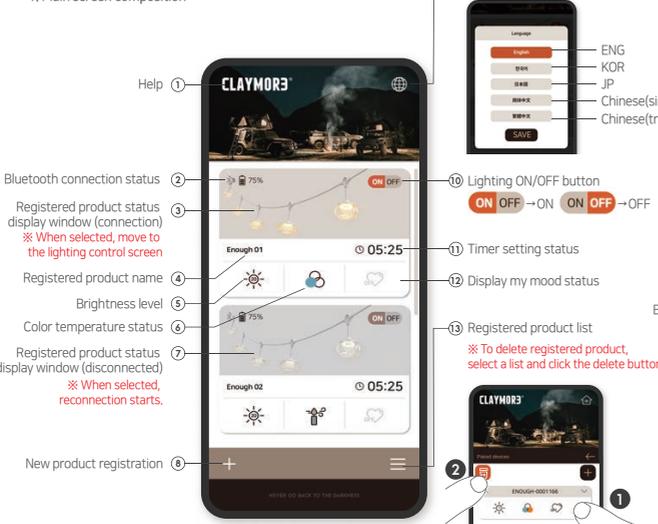

● Lighting control

1. Lighting control screen


CLAYMORE app can provide controlling light brightness in 20 steps, Light color temperature, and operation timer settings.



● My mood


1. Create my mood screen

You can save various color temperature(multiple selection) and Brightness as "my mood"

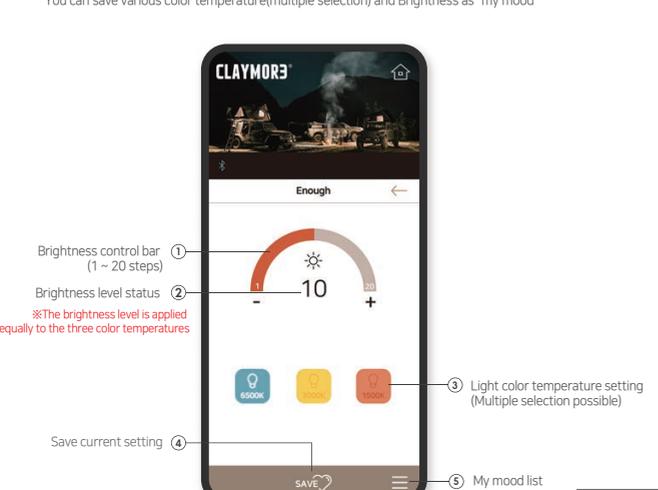

2. My mood list screen

From my mood List screen, you can save various moods.

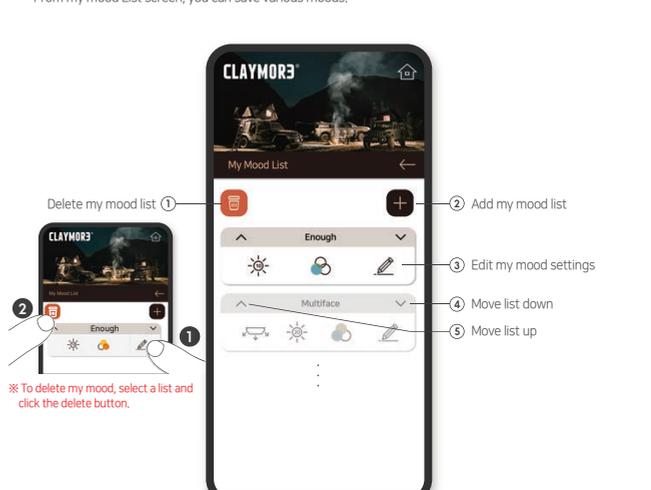

5. Specification

| | | | | | | |
|-------------------|------------------|--------|-------|-----------|--------|-------------|
| Product name | CLAYMORE Enough3 | | | | | |
| Model No. | CLEN-03 | | | | | |
| Color temperature | Cool | Bright | Warm | Soft Warm | Orange | Breeze |
| | 6500K | 4500K | 3000K | 2500K | 1500K | 1500K~3000K |
| Blightness | 230~2100Lm | | | | | |
| Size | 2900×80×159mm | | | | | |
| Weight | 401g | | | | | |
| Input | USB 5V 2A | | | | | |

※ Operating time may vary depending on the battery capacity and external environment

Designed by Prism in Korea / Made in China

Warranty

| | |
|------------------|------------------|
| Item | CLAYMORE Enough3 |
| Model No. | CLEN-03 |
| Seller | |
| Date of Purchase | |

- Thank you for purchasing CLAYMORE series of Prism Co., Ltd.
- This product has passed strict quality control tests. If the product is not functioning properly, please contact an authorized service center.

Free Service

- Failure of the product under normal operating conditions during the warranty period will be repaired by Prism or authorized service center on free of charge.
- Shipping and handling charges may be involved.
- Warranty period: 1 year.

Charged Service

- Damage caused when the warranty period is over.
- Damage caused due to the user's mishandling, abuse, or improper operation.
- Damage caused by arbitrary or personal repair or disassemble in unauthorized service center.
- Damage from input electricity or cable defect.
- Damage caused by natural disaster.

CLAYMORE

Prism Co., Ltd.
221, Pyeongheon-ro, Buyeong-gu, Incheon, Republic of Korea
www.claymorelight.com - www.prismlight.co.kr - info@prismlight.co.kr

[How to replace the diffusion filter]

Detach Hold the top of the filter to fix it, and turn it counterclockwise (to the left) with force.

Attach Insert the diffusion filter and turn it clockwise (to the right).

※ If the diffusion filter is not easily detached, wear gloves with strong friction.

